



Set up - deck frame

Boatsystem Group Sweden AB, Traneredsvägen 112, 426 53 Västra Frölunda, Sweden
 www.boatsystemgroup.com, +46 (0)31 69 03 80, info@boatsystemgroup.com

Assembly instructions NOA Deck frame


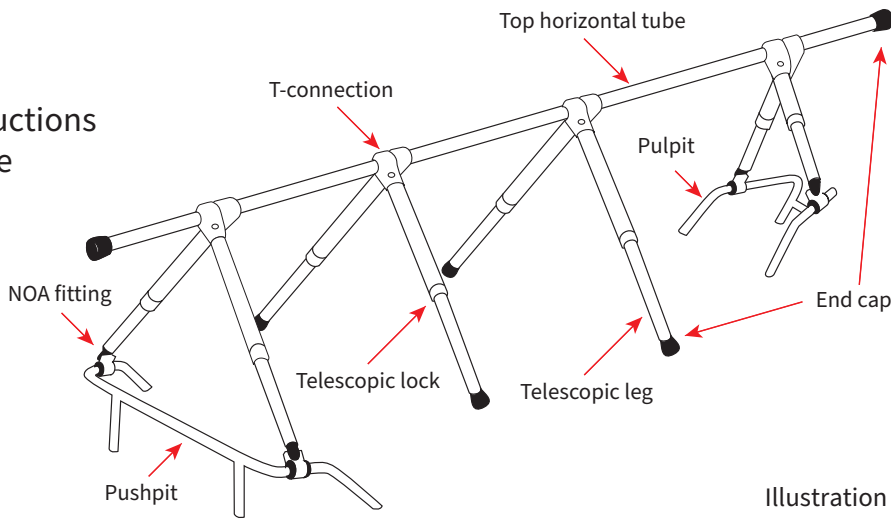



Illustration from 8 meter Deck frame

Thank you for choosing a frame from NOA!


1. Check package against table of contents. In most 35mm tubes there are 30 mm tube tucked. Be sure that you get them out!

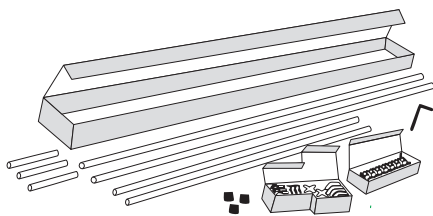


4. Assemble the top horizontal tube with joint locks. See instructions on top horizontal tube. Be sure to mount the top horizontal tube at the marking on the joint lock.

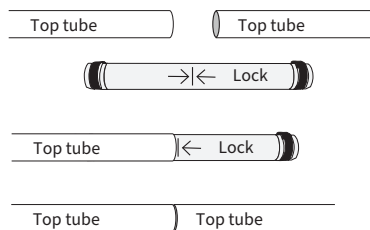


7. Fit the other deck legs and lean them against the toe rail or other appropriate place.

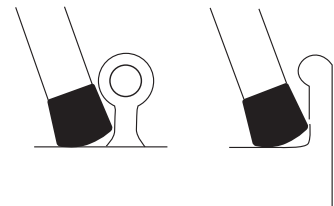

2. Pair the frame legs and mount plastic feet on the deck legs 30mm's pipes. Mount the telescopic lock as illustrated.

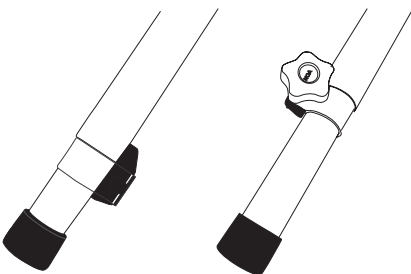

5. Mount the NOA fitting and the pulpit leg to the pulpit.

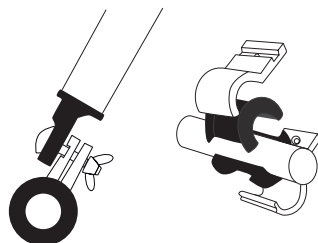


8. Mount the last legs with NOA fitting in the pushpit.

9. Adjust the top horizontal tube height of the boat using the telescopic locks.

10. Now tighten all knobs, wing nuts and bolts properly!

11. Secure the frame to the boat using of a rope so that the frame is not lifted when strong winds occur.

3. Mount the plastic plugs on two of the top horizontal tubes.

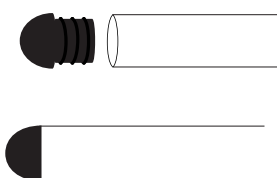

6. Lift the top horizontal tube and mount the T-connector to the top horizontal tube and the telescopic leg.

